

BURKARD TRAP: GUIDE FOR USE (VERSION 1)

Measurement times:

Preferably between 0900 and 1500 hrs, as close as possible to lidar operation

Measurements:

Insert a plate. Sticky side bears the white sticker (avoid unnecessary box opening)

Enable trap, beeping is fine. If red light blinks, good airflow is achieved

[Do not alter the number at the bottom (0 is the nominal value)]

Use for 20-30 minutes

Deactivate, remove plate

Record date and hours of operation

Place it sticky side up in the folder (avoid unnecessary folder opening)

Charging:

Charge for ~14 hrs for every 3 measurements

Plate delivery:

The plates must be delivered at NKUA once per week (Currently arranged on Mondays, 1300 onward)